




### Parapet Clamp, Adj. Aluminum

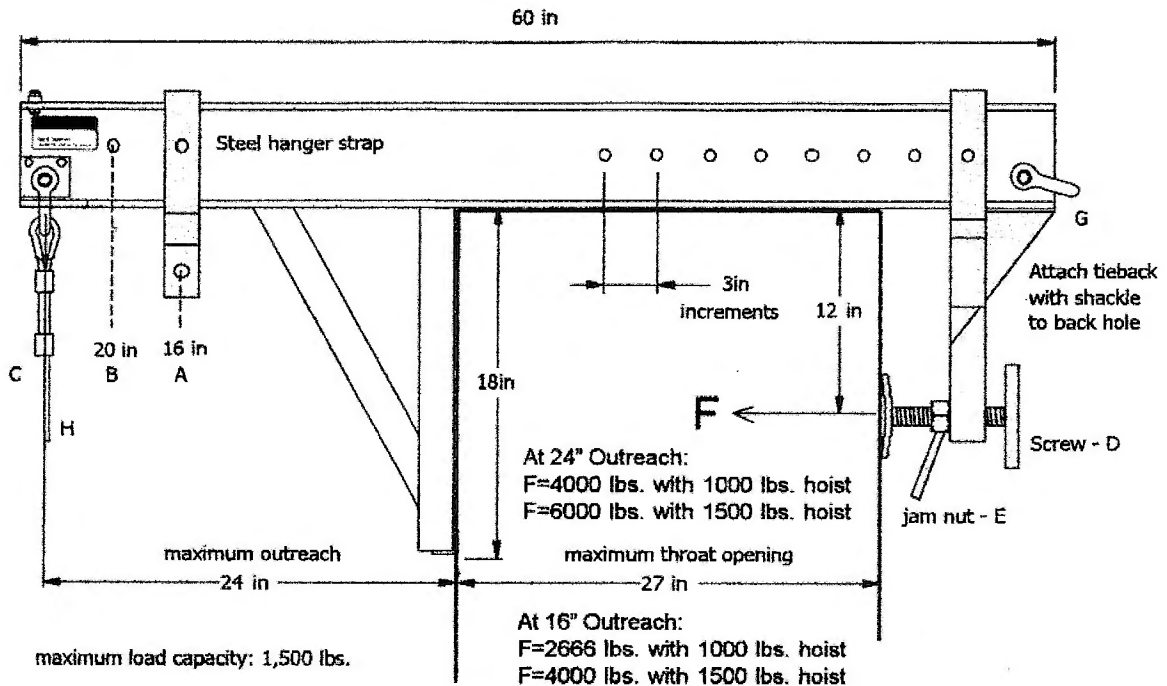

1. Determine if the parapet wall is strong enough to withstand Force "F" with a 4 to 1 safety factor.
2. Mount the adjustable rear clamp to match the width of the parapet. Allow 2 to 4 in. of slack which will be taken up by the screw ("D").
3. Tighten the screw by hand only, do not use any mechanical advantage.
4. Tighten the jam nut ("E") to prevent the screw from loosening up.
5. Attach the tieback cable with a shackle ("G") to the back hole of the beam.
6. Attach suspension wire rope ("H"). For an outreach of 16 ("A") or 20 in. ("B"), mount the hanger strap in the appropriate location. In case of a 24 in. outreach, mount the suspension wire rope ("H") directly to the front hole ("C") on the beam.

**WARNING:** Failure to properly install this device can result in injury or death. Failure to properly determine the strength of the parapet wall can result in injury or death.

