



Joseph W. Aujoy

Phone (415) 798-0021


Fax (650) 871-7056

INSTRUCTIONS

Using Parapet Clamps as Tieback Devices (not allowed in Canada)


1. Tieback Clamp is mounted higher than the rigging device:
Fasten the tieback cable to the front of the Parapet Clamp.

Tieback Clamp=Higher

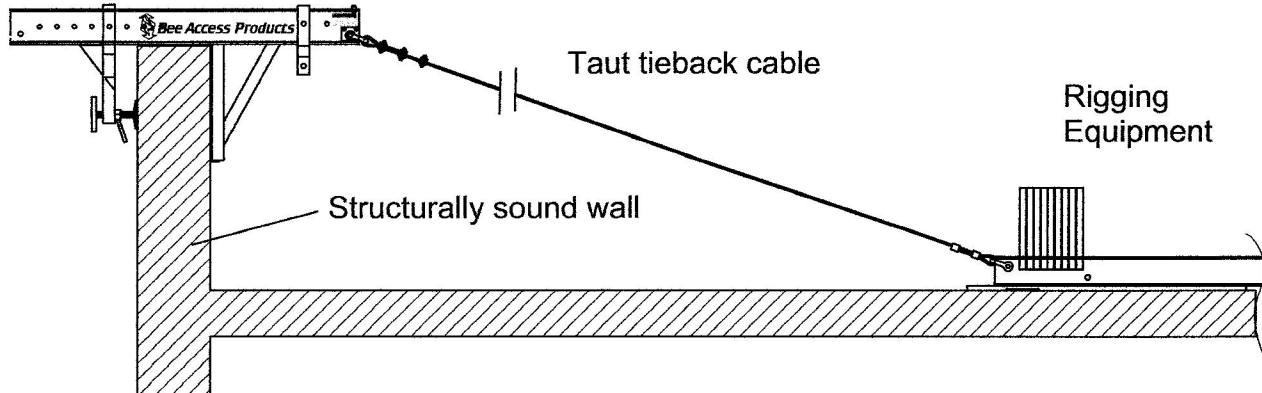

2. Tieback Clamp is mounted level with the rigging device:
Fasten the tieback cable to the rear of the Parapet Clamp.

Tieback Clamp=Level

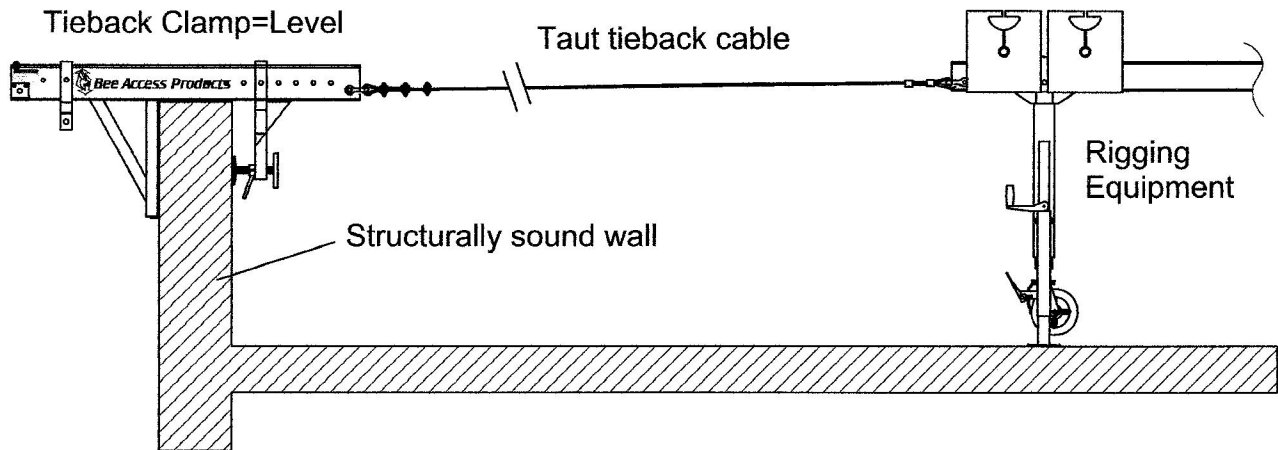

3. Tieback Clamp is mounted lower than the rigging device:
Fasten the tieback cable to the rear of the Parapet Clamp.

Tieback Clamp=Lower

